Parts Diagram for Bahco Ergo Secateurs – BAPX & BAPXR Series

BAR900P Bahco Ergo Centre Bolt – All
BAR901P Bahco Centre Bolt Lock System for Loppers & Ergo Secateurs
BAR902P Bahco Ergo Handle Screws x 4
BAR903P Bahco Ergo Spare Buffer x 2
BAR904P Bahco Ergo Locking Device
BAR905P Bahco Ergo Spring x 2 Low Strength
BAR906P Bahco Ergo Spring x 2 Mid Strength
BAR907P Bahco Ergo Spring x 2 Hi Strength

Small (N.1)

BAR300P Bahco Ergo Spare Blade 1 Small
BAR303P Bahco Ergo Counterblade 1 Small
BAR801P Bahco Ergo Cutting Head 1 Small

Medium (N.2)


BAR211P Bahco Ergo Blade 2 for Medium PXRM2 & PXM2
BAR403P Bahco Ergo Counterblade 2 Medium (Replaces R203P)
BAR802P Bahco Ergo Cutting Head 2 Medium

Medium Left Hand (N.2)

BAR600P Bahco Ergo 2L Blade for BAPXRM2L & BAPXM2L L/H
BAR603P Bahco Ergo Counterblade 2 L/H
BAR804P Bahco Ergo Cutting Head 2 L/H

Large (N.3)

BAR500P Bahco Ergo Spare Blade 3 Large
BAR503P Bahco Ergo Counterblade 3 Large
BAR803P Bahco Ergo Cutting Head 3 Large

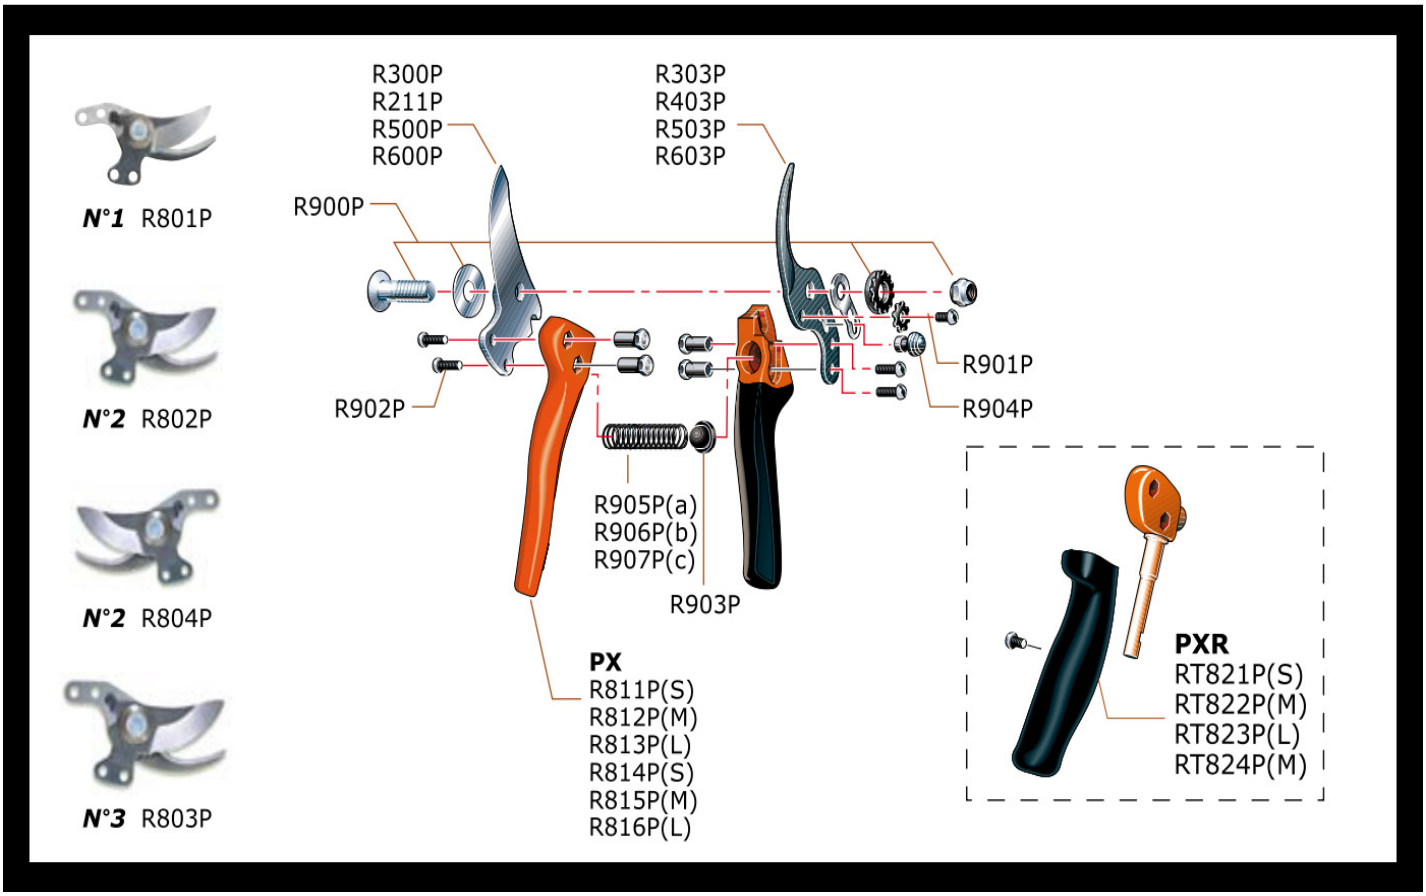

Handles (codes R811P-R816P & RT821P-RT824P) not stocked, available to order on request.